ASSEMBLY AND INSTALLATION INSTRUCTIONS
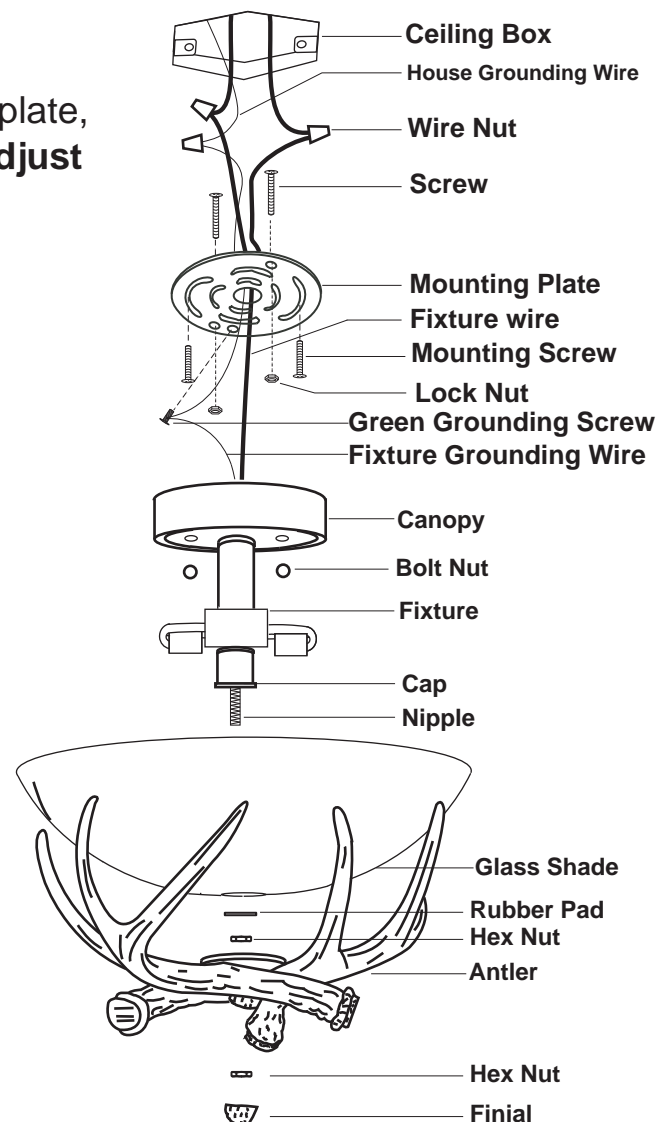
CF33016

WARNING:	TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

Installation Steps

1. Thread two screws downward to the mounting plate, and then secure with two lock nuts.**(You can adjust the length of the screw if necessary.)**
2. Attach the mounting plate to the ceiling box by using two mounting screws.
3. Make wire connections with wire nuts:
   - ---Connect the black wire from fixture to the black wire from power source.
   - ---Connect the white wire from fixture to the white wire from power source.
   - ---Attach the fixture grounding wire to the mounting plate with the green grounding screw. Then connect it to the house grounding wire with the wire nut.
   Carefully tuck wires back into the ceiling box.
4. Attach the canopy to the mounting plate, and secure with the bolt nuts.
5. Install bulbs. **(Please do not exceed the maximum capacity that is recommended on the package.)**
6. Attach the glass shade upward to the fixture carefully, and then secure with the rubber pad and hex nut.
7. Attach the antler upward to the glass shade, and then secure with the hex nut and finial.
8. Turn on the power at fuse or circuit box.

Ceiling Box
House Grounding Wire
Wire Nut
Screw
Mounting Plate
Fixture wire
Mounting Screw
Lock Nut
Green Grounding Screw
Fixture Grounding Wire
Canopy
Bolt Nut
Fixture
Cap
Nipple
Glass Shade
Rubber Pad
Hex Nut
Antler
Hex Nut
Finial

VAXCEL LIGHTING

050706